



FACTORY EQUIPPED AUTOMATICS:

When choosing the automatic transmission option, there are two extra unconnected wires included with the main harness that are NOT NEEDED if your 1994 or 1995 Ford Mustang is still equipped with the original automatic transmission. In other words, these two wires are not needed when both the over drive on/off button and the light on your gauge cluster already work.

ALL OTHERS:

OD TOGGLE (Overdrive Toggle): The Brown wire should be connected to a momentary switch which then turns overdrive on and off. The momentary switch needs to be connected to 12v.

OD STATUS LIGHT (Overdrive Status Light): The Light Blue wire should be connected to pin 1 on the TCSM connector, see Diagram 1 for pin location. This will control the light on the gauge cluster. See Diagram 2 for typical location of connector.

Diagram 1:

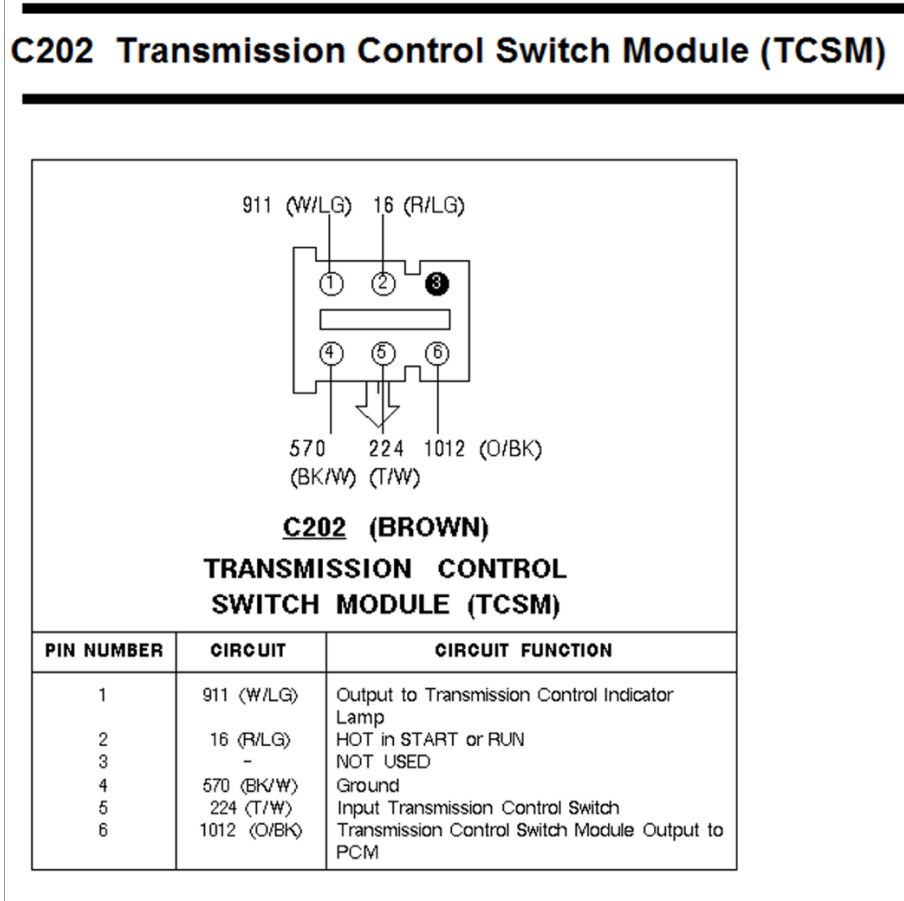


Diagram 2:

